

REVCAMUK


Reversing cameras UK Ltd

CAM560 - VW Transporter T5/T6 Barn Door Fitting Notes



Thank you for your purchase of our brake light reversing camera designed to fit 2003-Present Volkswagen Transporter T5 and T6 vans with the double doors / barn doors.

These fitting notes are designed to act as guidance to assist with the install of your new brake light camera. You will need to transplant the screws and white screw hole fixings from your original light unit. These instructions guide you through the process.

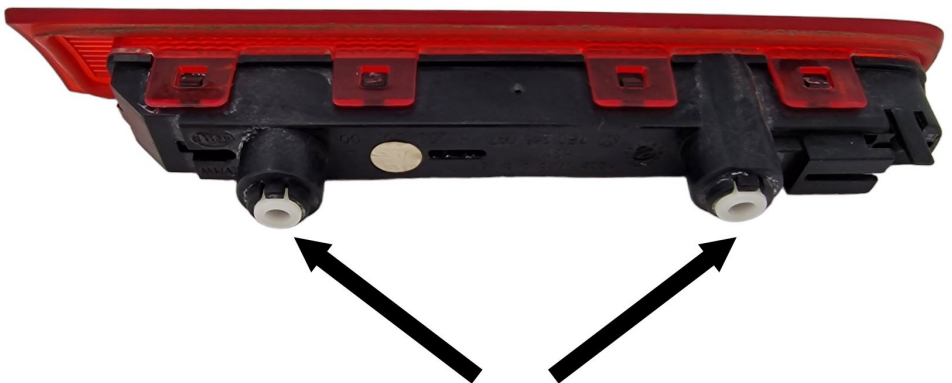

**These white parts need to be transplanted
from your original light unit**

Step 1.

Remove the old brake light from the vehicle. Keep these screws safe, as we will use those later to fix the new brake light camera to the van.

Step 2.

Use a tool to prise the red clips up on the old brake light. Be careful when doing this to avoid breaking the tabs. We suggest keeping a few prising tools on standby so you can prevent the clips locking again as you move on to the next one. In total you have 4 on the top and 4 on the bottom to release the red lens from the black plastic brake light back.

**Step 3.**

Release the black brake light strip holder from the original red brake light lens. Find a place to work on this part.

Step 4.

Remove the light strip + clear lens from the original brake light housing. This is easier to remove than the previous steps. You will start to see the two white screw sockets that we will be transplanting in to the new brake light camera housing.

**Step 5.**

I find a gentle lever on the black plastic tabs next to the white screw pieces helps make releasing them easier.


Step 6.

Push the white plastic screw pieces out, they can only be removed from the inside. I found a small screw driver that I pushed in to the white plastic pieces from the out-





side and carried on pushing until they popped through. This was a very easy way to extract them.

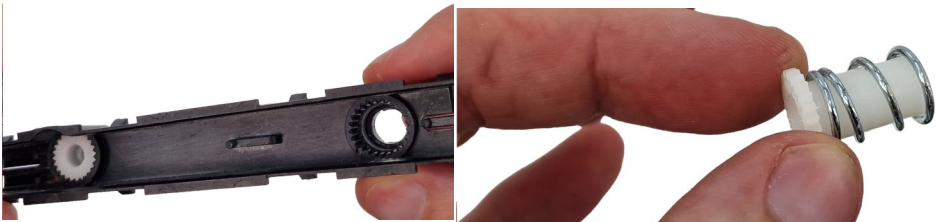

Once you have removed both pieces, set them safely to one side as you will be transplanting these in to your new brake light camera.


Step 7.

Open the new brake light camera housing up by undoing the 4 tabs top and bottom.




Step 8.

Remove the small black screws on the green printed LED circuit board of the new brake light camera, set them safely to one side. Next remove the LED circuit board strip and place this to one side too.

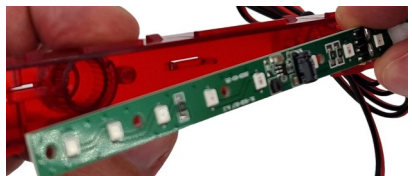


Step 9.

Insert the two plastic pieces in to the rear part of the new brake light camera so that they fit flush.

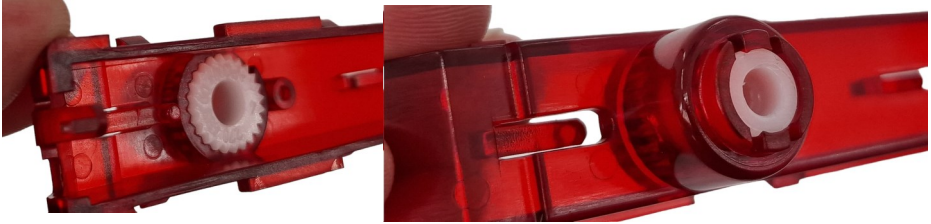**Step 10.**

Re-screw the LED light strip circuit board back to the original position on the new brake light camera.

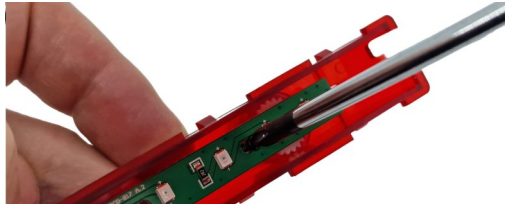**Step 11.**

Click the front and rear section of the brake light camera together so that the tabs all click in to position (both top and bottom).

**Step 12.**

Add the adhesive sealing strip to the camera (remove the protective strip when you have it in the correct position).

**Step 13.**

Fix the new brake light camera on to the vehicle using the two original screws. Then follow any further wiring instructions that we have provided for the install.

Sit back and enjoy a calming cup of tea (or coffee), and enjoy the efforts of your labour.

We hope you are happy with your purchase. We would love to see your photos, please email to photos@revcam.uk